 
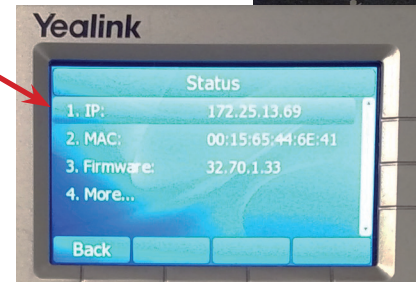 


# Yealink SIP-T46G/S:

 
 
## 1. Access the Sip Device's IP Address.

- In order to provision the phone efficiently, you will need to log into the phone through its web interface.
- A. Press "OK" button
  - I. or press Menu->Status.
  - II. Press "up" or "down" arrows or to scroll through the list and view information.
- B. The Phone Status will appear on the Screen.
  - I. Yealink Status Screen
    - a. Write down the phones IP Address.
    - b. If the IP address shows 0.0.0.0
      - 01. Verify all connections to the Network.

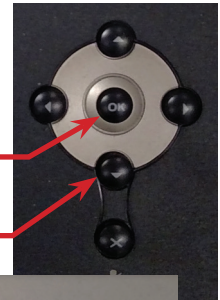


## 2. Accessing the Web Interface.

- A. Enter the IP address into the web browser address bar.
- B. The Login screen will appear.
  - I. Enter the Username in the text field.
  - II. Enter the Password in the text field.
  - III. Select the Login button.
- C. The Phones Status Screen will open.
  - I. Select the Account Tab.
    - a. The Register section will open.
- D. Select the account you wish to register using the drop-down menu.

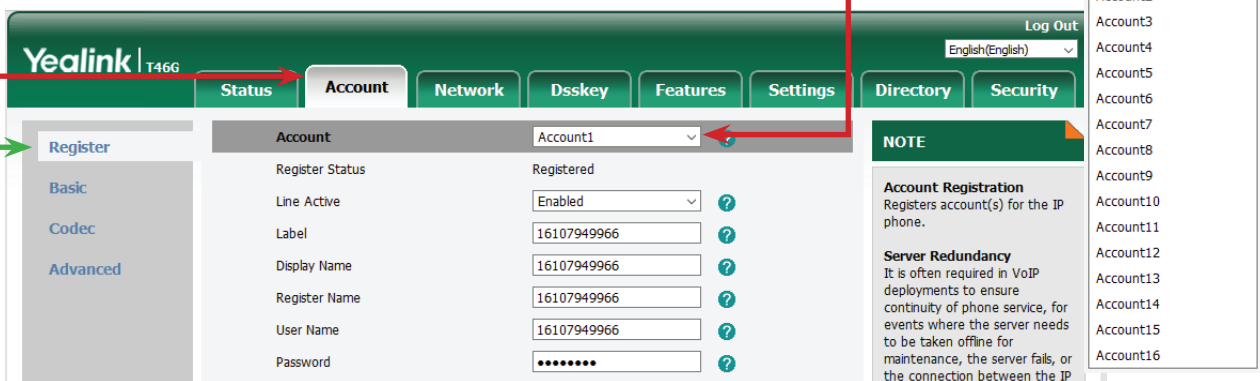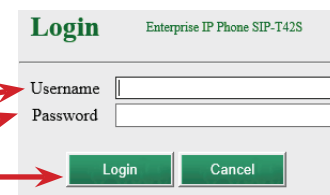

 - E. Enable the line.
  - I. Select Enable in the Line Active drop-down menu.
- F. Enter the following information for the Account in the text boxes.
  - I. Label:
    - The name showing on the LCD of the Device.
  - a. Options.
    - 01. Phone number.
    - 02. Users Name.
    - 03. and / or Extension Number.



## II. Display Name:

- The local name showing on other SIP devices when called within the switch.

## a. Options.

01. Phone number.
02. Users Name.
03. and / or Extension Number.

## III. Register Name:

- The Account ID provided in the Welcome Letter.
  - 11 Digit Phone number.

## IV. User Name:

- The Account ID provided in the Welcome Letter.
  - 11 Digit Phone number.

## V. Password:

- a. The Service Password provided in the Welcome Letter.

## G. Enter the SIP Server Information in the text boxes.

SIP Server 1 ?	
Server Host	<input type="text" value="sip.itcgn.com"/> Port <input type="text" value="5060"/> ?
Transport	<input type="text" value="UDP"/> ?
Server Expires	<input type="text" value="3600"/> ?
Server Retry Counts	<input type="text" value="3"/> ?

## I. Server Host:

- a. sip.itcgn.com

## II. Port:

- a. do not change from 5060

## III. Transport

- a. Do not change from UDP.

## H. Select the Confirm button at the bottom of the page when finished.



## I. Select the Cancel button to cancel entries.