 


Yealink SIP-W52P:

1. Access the Sip Device's IP Address.

 
 
- In order to provision the phone efficiently, you will need to log into the phone through its web interface.

- A. Press "OK" button.
 - I. The Status option should be highlighted.
- B. Press "OK" button.
 - I. The System Status option should be highlighted.
- C. Press "OK" button.
- D. The Phone Status will appear on the Screen.
- E. Status Screen:
 - I. Write down the phones IP Address.
 - a. If the IP address shows 0.0.0.0
 01. Verify all connections to the Network.

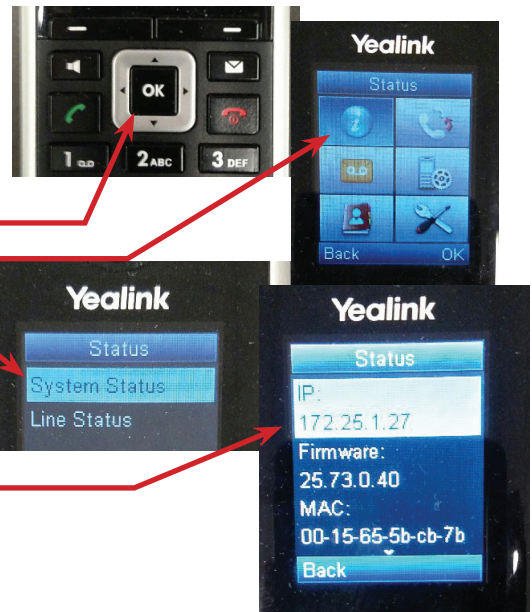


2. Accessing the Web Interface.

- A. Enter the IP address into the web browser address bar.
- B. The Login screen will appear.
 - I. Enter the Username in the text field.
 - II. Enter the Password in the text field.
 - III. Select the Login button.
- C. The Phones Status Screen will open.
 - I. Select the Account Tab.
 - a. The Basic section will open.
 - D. Select the account you wish to register using the drop-down menu.

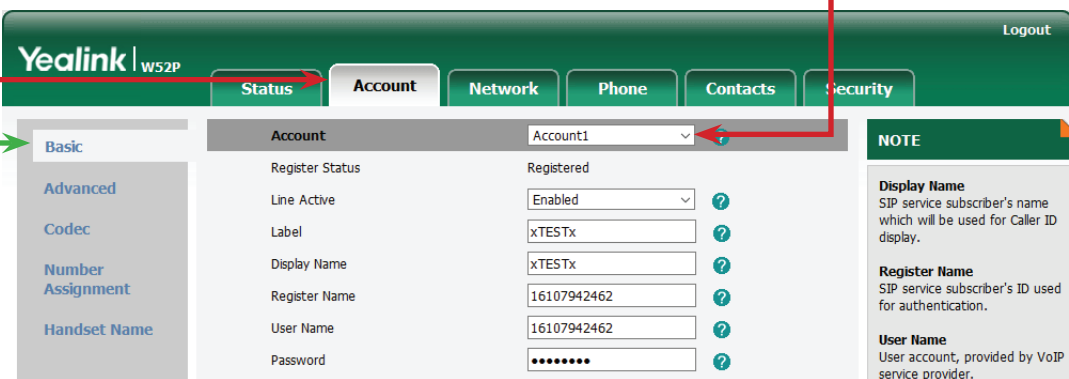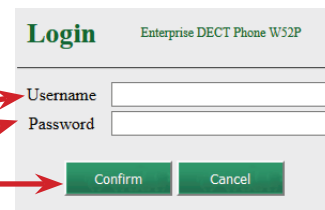

 - E. Enable the line.
 - I. Select Enable in the Line Active drop-down menu.
- F. Enter the following information for the Account in the text boxes.
 - I. Label:
 - The name showing on the LCD of the Device.
 - a. Options.
 01. Phone number.
 02. Users Name.
 03. and / or Extension Number.



II. Display Name:

- The local name showing on other SIP devices when called within the switch.

a. Options.

01. Phone number.
02. Users Name.
03. and / or Extension Number.

III. Register Name:

- The Account ID provided in the Welcome Letter.
 - 11 Digit Phone number.

IV. User Name:

- The Account ID provided in the Welcome Letter.
 - 11 Digit Phone number.

V. Password:

- a. The Service Password provided in the Welcome Letter.

G. Enter the SIP Server Information in the text boxes.

SIP Server	<input type="text" value="sip.itcgn.com"/>	Port	<input type="text" value="5060"/>
Enable Outbound Proxy Server	<input type="text" value="Disabled"/>		
Outbound Proxy Server	<input type="text"/>	Port	<input type="text" value="5060"/>
Transport	<input type="text" value="UDP"/>		

I. Server Host:

- a. sip.itcgn.com

II. Port:

- a. do not change from 5060

III. Transport

- a. Do not change from UDP.

H. Select the Confirm button at the bottom of the page when finished.



I. Select the Cancel button to cancel entries.